


STEP 1: INSTALLATION

M-LOK Type 2 Covers are symmetric high strength polymer covers. To install, place base plate flat in desired *M-LOK™* slot and firmly insert locking tab until flush with base plate. When installed correctly cover cannot be removed unintentionally. Covers are optimized for use at the 3, 6, 9 o'clock positions.




NOTE: The *M-LOK Type 2 Cover* locking tabs are customizable to length by snapping sections off at the pre-determined lengths. Not intended for use with MOE hand guards.

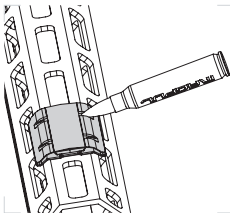

STEP 2: SEPARATION & REMOVAL

Using the tip of a small rounded tool (i.e. 5.56 NATO round) push inward on one side of locking plate. Lock plate should loosen to the point where it can be removed. If the locking plate is still tight, repeat loosening procedure on opposite side.

WARNING: DO NOT USE KNIFE BLADES OR OTHER SHARP TOOLS TO REMOVE THE M-LOK TYPE 2 COVERS AS THIS CAN CAUSE SERIOUS INJURY!

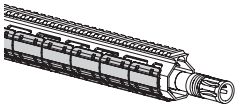

VERIFY INSTALLATION

Perform final inspection including function check per **US Army TM 9-1005-23&P Unit and Direct Support Maintenance Manual (3-97)** to verify proper weapon function.

Always test fire your weapon before using it in an operational environment.

U N F A I R A D V A N T A G E .

- ⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.**
- ⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.**